



## FEL-PRO INSTALLATION TIPS

### VALVE COVER GASKET



To effectively seal this sophisticated engine applicatio, FEL-PRO has included PERMA-DRY molded rubber gasket(s) in this set.

**CLEAN MATING SURFACES** of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

**CHECK COVER FLANGES** for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

#### ATTACH AND ALIGN GASKET.

**IMPORTANT:** This molded rubber silicone gasket must be installed **DRY** without any chemical adhesive.

**PLACE GASKET IN VALVE COVER.** This gasket is intentionally manufactured undersized and **requires slight stretching** to fit snugly into the cover.

**REINSTALL COVER TO ENGINE.** Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



## FEL-PRO INSTALLATION TIPS

### VALVE COVER GASKET



To effectively seal this sophisticated engine applicatio, FEL-PRO has included PERMA-DRY molded rubber gasket(s) in this set.

**CLEAN MATING SURFACES** of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

**CHECK COVER FLANGES** for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

#### ATTACH AND ALIGN GASKET.

**IMPORTANT:** This molded rubber silicone gasket must be installed **DRY** without any chemical adhesive.

**PLACE GASKET IN VALVE COVER.** This gasket is intentionally manufactured undersized and **requires slight stretching** to fit snugly into the cover.

**REINSTALL COVER TO ENGINE.** Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



## FEL-PRO INSTALLATION TIPS

### VALVE COVER GASKET



To effectively seal this sophisticated engine applicatio, FEL-PRO has included PERMA-DRY molded rubber gasket(s) in this set.

**CLEAN MATING SURFACES** of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

**CHECK COVER FLANGES** for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

#### ATTACH AND ALIGN GASKET.

**IMPORTANT:** This molded rubber silicone gasket must be installed **DRY** without any chemical adhesive.

**PLACE GASKET IN VALVE COVER.** This gasket is intentionally manufactured undersized and **requires slight stretching** to fit snugly into the cover.

**REINSTALL COVER TO ENGINE.** Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.



## FEL-PRO INSTALLATION TIPS

### VALVE COVER GASKET



To effectively seal this sophisticated engine applicatio, FEL-PRO has included PERMA-DRY molded rubber gasket(s) in this set.

**CLEAN MATING SURFACES** of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

**CHECK COVER FLANGES** for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

#### ATTACH AND ALIGN GASKET.

**IMPORTANT:** This molded rubber silicone gasket must be installed **DRY** without any chemical adhesive.

**PLACE GASKET IN VALVE COVER.** This gasket is intentionally manufactured undersized and **requires slight stretching** to fit snugly into the cover.

**REINSTALL COVER TO ENGINE.** Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.