



FEL-PRO INSTALLATION TIPS

HEADSAVER® SPACER SHIM

IMPORTANT: The Spacer Shim must be used in combination with a FEL-PRO head gasket.

All **Spacer Shim**, manufactured from a nominal .020" thick dead soft copper, is intended for use on engines where additional thickness is desired to help reduce compression ratios and/or restore the correct assembled height.

NOTE: Surface oxidation of this copper spacer shim is normal and does not affect the function of the shim.

CLEAN MATING SURFACE.

Before coating shims, follow any directional markings shown on shim(s). If no markings exist, install shim by matching the shim to the engine deck surface. Remove Shim(S) to coat, and follow instructions indicated below;

When used with a two sided PRINTOSEAL® Gasket: Apply a thin even coat of spray gasket sealer to the block side of shim.

ATTACH AND ALIGN GASKET ON TOP OF SHIM.

REINSTALL CYLINDER HEAD(S) TO ENGINE.

IMPORTANT: Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

HEADSAVER® SPACER SHIM

IMPORTANT: The Spacer Shim must be used in combination with a FEL-PRO head gasket.

All **Spacer Shim**, manufactured from a nominal .020" thick dead soft copper, is intended for use on engines where additional thickness is desired to help reduce compression ratios and/or restore the correct assembled height.

NOTE: Surface oxidation of this copper spacer shim is normal and does not affect the function of the shim.

CLEAN MATING SURFACE.

Before coating shims, follow any directional markings shown on shim(s). If no markings exist, install shim by matching the shim to the engine deck surface. Remove Shim(S) to coat, and follow instructions indicated below;

When used with a two sided PRINTOSEAL® Gasket: Apply a thin even coat of spray gasket sealer to the block side of shim.

ATTACH AND ALIGN GASKET ON TOP OF SHIM.

REINSTALL CYLINDER HEAD(S) TO ENGINE.

IMPORTANT: Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

HEADSAVER® SPACER SHIM

IMPORTANT: The Spacer Shim must be used in combination with a FEL-PRO head gasket.

All **Spacer Shim**, manufactured from a nominal .020" thick dead soft copper, is intended for use on engines where additional thickness is desired to help reduce compression ratios and/or restore the correct assembled height.

NOTE: Surface oxidation of this copper spacer shim is normal and does not affect the function of the shim.

CLEAN MATING SURFACE.

Before coating shims, follow any directional markings shown on shim(s). If no markings exist, install shim by matching the shim to the engine deck surface. Remove Shim(S) to coat, and follow instructions indicated below;

When used with a two sided PRINTOSEAL® Gasket: Apply a thin even coat of spray gasket sealer to the block side of shim.

ATTACH AND ALIGN GASKET ON TOP OF SHIM.

REINSTALL CYLINDER HEAD(S) TO ENGINE.

IMPORTANT: Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

HEADSAVER® SPACER SHIM

IMPORTANT: The Spacer Shim must be used in combination with a FEL-PRO head gasket.

All **Spacer Shim**, manufactured from a nominal .020" thick dead soft copper, is intended for use on engines where additional thickness is desired to help reduce compression ratios and/or restore the correct assembled height.

NOTE: Surface oxidation of this copper spacer shim is normal and does not affect the function of the shim.

CLEAN MATING SURFACE.

Before coating shims, follow any directional markings shown on shim(s). If no markings exist, install shim by matching the shim to the engine deck surface. Remove Shim(S) to coat, and follow instructions indicated below;

When used with a two sided PRINTOSEAL® Gasket: Apply a thin even coat of spray gasket sealer to the block side of shim.

ATTACH AND ALIGN GASKET ON TOP OF SHIM.

REINSTALL CYLINDER HEAD(S) TO ENGINE.

IMPORTANT: Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

HEADSAVER® SPACER SHIM

IMPORTANT: The Spacer Shim must be used in combination with a FEL-PRO head gasket.

All **Spacer Shim**, manufactured from a nominal .020" thick dead soft copper, is intended for use on engines where additional thickness is desired to help reduce compression ratios and/or restore the correct assembled height.

NOTE: Surface oxidation of this copper spacer shim is normal and does not affect the function of the shim.

CLEAN MATING SURFACE.

Before coating shims, follow any directional markings shown on shim(s). If no markings exist, install shim by matching the shim to the engine deck surface. Remove Shim(S) to coat, and follow instructions indicated below;

When used with a two sided PRINTOSEAL® Gasket: Apply a thin even coat of spray gasket sealer to the block side of shim.

ATTACH AND ALIGN GASKET ON TOP OF SHIM.

REINSTALL CYLINDER HEAD(S) TO ENGINE.

IMPORTANT: Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

HEADSAVER® SPACER SHIM

IMPORTANT: The Spacer Shim must be used in combination with a FEL-PRO head gasket.

All **Spacer Shim**, manufactured from a nominal .020" thick dead soft copper, is intended for use on engines where additional thickness is desired to help reduce compression ratios and/or restore the correct assembled height.

NOTE: Surface oxidation of this copper spacer shim is normal and does not affect the function of the shim.

CLEAN MATING SURFACE.

Before coating shims, follow any directional markings shown on shim(s). If no markings exist, install shim by matching the shim to the engine deck surface. Remove Shim(S) to coat, and follow instructions indicated below;

When used with a two sided PRINTOSEAL® Gasket: Apply a thin even coat of spray gasket sealer to the block side of shim.

ATTACH AND ALIGN GASKET ON TOP OF SHIM.

REINSTALL CYLINDER HEAD(S) TO ENGINE.

IMPORTANT: Torque securely to OEM specifications.