



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

PRIOR TO INSTALLATION of casting check fit of gasket. If gasket material extends beyond casting trim gasket to fit, using a sharp blade.

MISCELLANEOUS FLUID SEALING GASKETS

ATTACH AND ALIGN GASKET(S)/SEAL(S): If supplementary sealer is desired, apply a thin coat of gasket sealer to both sides of gasket(s).

However, molded rubber gasket(s) or those with colored sealing beads, install DRY.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

PRIOR TO INSTALLATION of casting check fit of gasket. If gasket material extends beyond casting trim gasket to fit, using a sharp blade.

MISCELLANEOUS FLUID SEALING GASKETS

ATTACH AND ALIGN GASKET(S)/SEAL(S): If supplementary sealer is desired, apply a thin coat of gasket sealer to both sides of gasket(s).

However, molded rubber gasket(s) or those with colored sealing beads, install DRY.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

PRIOR TO INSTALLATION of casting check fit of gasket. If gasket material extends beyond casting trim gasket to fit, using a sharp blade.

MISCELLANEOUS FLUID SEALING GASKETS

ATTACH AND ALIGN GASKET(S)/SEAL(S): If supplementary sealer is desired, apply a thin coat of gasket sealer to both sides of gasket(s).

However, molded rubber gasket(s) or those with colored sealing beads, install DRY.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

PRIOR TO INSTALLATION of casting check fit of gasket. If gasket material extends beyond casting trim gasket to fit, using a sharp blade.

MISCELLANEOUS FLUID SEALING GASKETS

ATTACH AND ALIGN GASKET(S)/SEAL(S): If supplementary sealer is desired, apply a thin coat of gasket sealer to both sides of gasket(s).

However, molded rubber gasket(s) or those with colored sealing beads, install DRY.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

PRIOR TO INSTALLATION of casting check fit of gasket. If gasket material extends beyond casting trim gasket to fit, using a sharp blade.

MISCELLANEOUS FLUID SEALING GASKETS

ATTACH AND ALIGN GASKET(S)/SEAL(S): If supplementary sealer is desired, apply a thin coat of gasket sealer to both sides of gasket(s).

However, molded rubber gasket(s) or those with colored sealing beads, install DRY.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

PRIOR TO INSTALLATION of casting check fit of gasket. If gasket material extends beyond casting trim gasket to fit, using a sharp blade.

MISCELLANEOUS FLUID SEALING GASKETS

ATTACH AND ALIGN GASKET(S)/SEAL(S): If supplementary sealer is desired, apply a thin coat of gasket sealer to both sides of gasket(s).

However, molded rubber gasket(s) or those with colored sealing beads, install DRY.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.