



FEL-PRO INSTALLATION TIPS

TIMING COVER

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

If oil pan is sealed with RTV silicone, do not use oil pan segment(s). **CREATE OIL PAN GASKET** by applying a continuous 1/4" bead of RTV Black silicone sealer on the exposed oil pan front.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

PRIOR TO INSTALLATION check fit of cover gasket and oil pan segment(s). If necessary, trim bottom ends of cover gasket and oil pan segment(s) flush with castings. Make certain to align the gasket holes with the casting holes.

ATTACH AND ALIGN GASKET AND SEGMENT(S): Apply a quick-drying adhesive sparingly in several places on the engine casting or block. Attach gasket(s) on surface where adhesive was applied. Allow time for adhesive to set. Test for slippage with light pressure. If gasket moves, allow more time.

PRIOR TO REINSTALLING COVER: Apply a 1/8" bead of RTV Black silicone sealer to the oil pan to block intersections.

REINSTALL COVERTO ENGINE. Torque bolts evenly and slowly to OEM specifications.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

TIMING COVER

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

If oil pan is sealed with RTV silicone, do not use oil pan segment(s). **CREATE OIL PAN GASKET** by applying a continuous 1/4" bead of RTV Black silicone sealer on the exposed oil pan front.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

PRIOR TO INSTALLATION check fit of cover gasket and oil pan segment(s). If necessary, trim bottom ends of cover gasket and oil pan segment(s) flush with castings. Make certain to align the gasket holes with the casting holes.

ATTACH AND ALIGN GASKET AND SEGMENT(S): Apply a quick-drying adhesive sparingly in several places on the engine casting or block. Attach gasket(s) on surface where adhesive was applied. Allow time for adhesive to set. Test for slippage with light pressure. If gasket moves, allow more time.

PRIOR TO REINSTALLING COVER: Apply a 1/8" bead of RTV Black silicone sealer to the oil pan to block intersections.

REINSTALL COVERTO ENGINE. Torque bolts evenly and slowly to OEM specifications.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

TIMING COVER

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

If oil pan is sealed with RTV silicone, do not use oil pan segment(s). **CREATE OIL PAN GASKET** by applying a continuous 1/4" bead of RTV Black silicone sealer on the exposed oil pan front.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

PRIOR TO INSTALLATION check fit of cover gasket and oil pan segment(s). If necessary, trim bottom ends of cover gasket and oil pan segment(s) flush with castings. Make certain to align the gasket holes with the casting holes.

ATTACH AND ALIGN GASKET AND SEGMENT(S): Apply a quick-drying adhesive sparingly in several places on the engine casting or block. Attach gasket(s) on surface where adhesive was applied. Allow time for adhesive to set. Test for slippage with light pressure. If gasket moves, allow more time.

PRIOR TO REINSTALLING COVER: Apply a 1/8" bead of RTV Black silicone sealer to the oil pan to block intersections.

REINSTALL COVERTO ENGINE. Torque bolts evenly and slowly to OEM specifications.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

TIMING COVER

PRIOR TO INSTALLING THE SEAL apply a thin coat grease on the seal face.

IMPORTANT: Do not install any seal without break-in lubricant protection.

If oil pan is sealed with RTV silicone, do not use oil pan segment(s). **CREATE OIL PAN GASKET** by applying a continuous 1/4" bead of RTV Black silicone sealer on the exposed oil pan front.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser.

PRIOR TO INSTALLATION check fit of cover gasket and oil pan segment(s). If necessary, trim bottom ends of cover gasket and oil pan segment(s) flush with castings. Make certain to align the gasket holes with the casting holes.

ATTACH AND ALIGN GASKET AND SEGMENT(S): Apply a quick-drying adhesive sparingly in several places on the engine casting or block. Attach gasket(s) on surface where adhesive was applied. Allow time for adhesive to set. Test for slippage with light pressure. If gasket moves, allow more time.

PRIOR TO REINSTALLING COVER: Apply a 1/8" bead of RTV Black silicone sealer to the oil pan to block intersections.

REINSTALL COVERTO ENGINE. Torque bolts evenly and slowly to OEM specifications.

TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.