



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)



FEL-PRO INSTALLATION TIPS

ROTATING SHAFT SEALS

PRIOR TO INSTALLING THE ROTATING SHAFT AND/OR SEAL apply a thin coat of lubricant, such as grease, on the sealing lip and shaft.

IMPORTANT: Do not install any seal without break-in lubricant protection.

IMPORTANT: Rubber seals are properly installed when its largest raised sealing lip is closest towards engine.

OIL PUMP

TO ASSIST IN ALIGNMENT AND SEALING DURING ASSEMBLY, apply a thin coat of gasket sealer to both sides of gasket(s).

©2001 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-858 (Rev. 6/01)