



FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and must be removed after the seal is installed.

Fel-Pro does not recommended the use of a repair sleeve with this seal.

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block (depending upon engine model).

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

-continued-

FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft.

Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)

-continued-

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

(depending upon engine model).

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block

Fel-Pro does not recommended the use of a repair sleeve with this seal.

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and shaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

REAR MAIN BEARING SEAL

FEL-PRO INSTALLATION TIPS



FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft. Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)



FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and must be removed after the seal is installed.

Fel-Pro does not recommended the use of a repair sleeve with this seal.

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block (depending upon engine model).

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

-continued-

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)

FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft.

Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)

-continued-

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

(depending upon engine model).

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block

Fel-Pro does not recommended the use of a repair sleeve with this seal.

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and shaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

REAR MAIN BEARING SEAL

FEL-PRO INSTALLATION TIPS



FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft. Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.



FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and must be removed after the seal is installed.

Fel-Pro does not recommended the use of a repair sleeve with this seal.

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block (depending upon engine model).

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

-continued-

FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft.

Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)

-continued-

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

(depending upon engine model).

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block

Fel-Pro does not recommended the use of a repair sleeve with this seal.

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and shaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

REAR MAIN BEARING SEAL

FEL-PRO INSTALLATION TIPS



FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft. Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)



FEL-PRO INSTALLATION TIPS

REAR MAIN BEARING SEAL

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and must be removed after the seal is installed.

Fel-Pro does not recommended the use of a repair sleeve with this seal.

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block (depending upon engine model).

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

-continued-

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)

FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft.

Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

© 2000 Federal-Mogul Corporation
Printed in U.S.A. Form No. I-95 (Rev. 09/03)

-continued-

IMPORTANT: This (PTFE) seal must be installed **DRY**. Do not lubricate seal lip or the cranshaft.

(depending upon engine model).

INSTALL SEAL into the recessed cavity of the seal retainer or into the cylinder block

Fel-Pro does not recommended the use of a repair sleeve with this seal.

The seal contained in this set has a preinstalled plastic intallation tool. The tool protects the seal at time of installation and shaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.

REAR MAIN BEARING SEAL

FEL-PRO INSTALLATION TIPS



FLYWHEEL BOLTS

REINSTALL FLYWHEEL to crankshaft. Note: On some engines tha use a one-piece rear main bearing seal, a condition may exist where the bolt holes in the crankshaft rear flange have been drilled too deep by the manufacturer. This can result in oil seepage which may be misdiagnosed as coming from the oil pan or rear main bearing seal. To prevent seepage, coat bolt threads with thread locking sealer. Torque securely to OEM specifications.