

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

 
TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

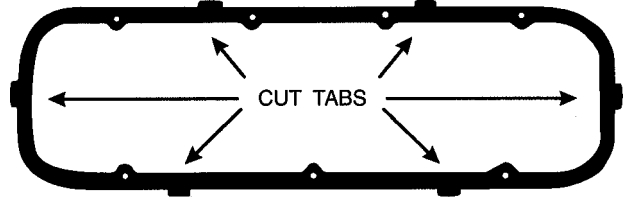


TYPICAL ILLUSTRATION

PRIOR TO INSTALLATION of covers check fit of gasket. If necessary, remove gasket tabs. Cut tabs using a sharp blade.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

 CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

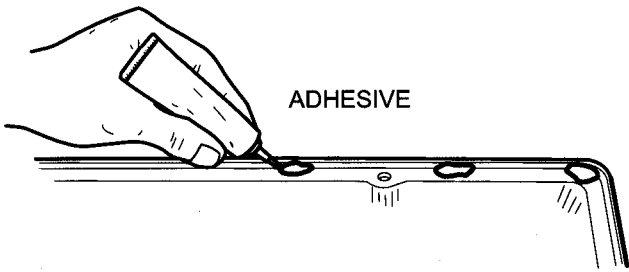

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

 
TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

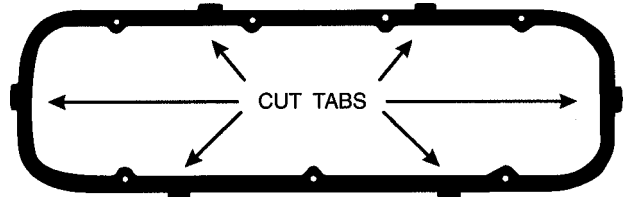


TYPICAL ILLUSTRATION

PRIOR TO INSTALLATION of covers check fit of gasket. If necessary, remove gasket tabs. Cut tabs using a sharp blade.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

 CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

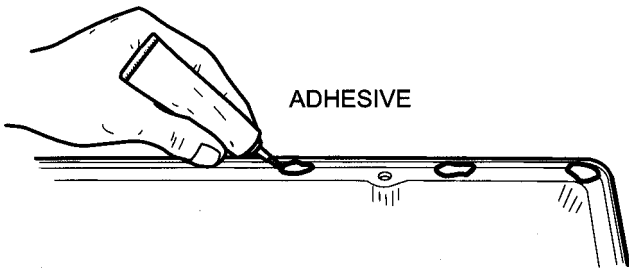

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

 
TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

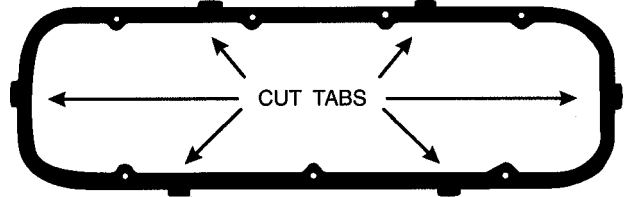


TYPICAL ILLUSTRATION

PRIOR TO INSTALLATION of covers check fit of gasket. If necessary, remove gasket tabs. Cut tabs using a sharp blade.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

 CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.

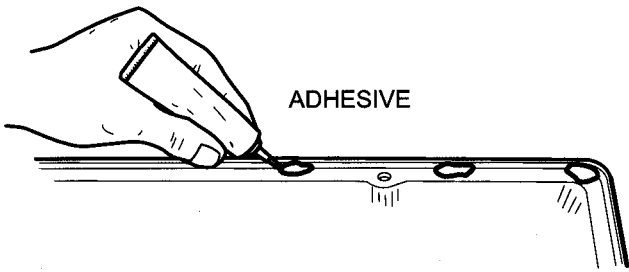

ATTACH AND ALIGN GASKET. Apply quick-drying adhesive sparingly in several places on the mating surface of cover. If gasket has installation tabs, adhesive is **not** required. Mount gasket on cover. **Allow time for adhesive to set.** Test for slippage with light pressure. If gasket moves, allow more time.

REINSTALL COVER TO ENGINE. Torque securely to OEM specifications. Over-torquing can distort cover and cause leakage.

 
TEST RUN ENGINE. Check all mating areas thoroughly to determine that all seals hold during operation.



FEL-PRO INSTALLATION TIPS

Fel-Pro products are the result of exhaustive research and strict quality control. However, no sealing product is better than the quality of its installation.

VALVE COVER GASKET

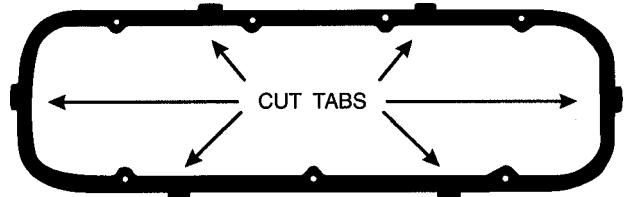

TYPICAL ILLUSTRATION

PRIOR TO INSTALLATION of covers check fit of gasket. If necessary, remove gasket tabs. Cut tabs using a sharp blade.

CLEAN MATING SURFACES of all foreign material including old gaskets, RTV and oil. You may wish to use a degreaser. Also, clean oil return holes.

CHECK COVER FLANGES for flatness. Straighten stamped metal covers. Replace if severely distorted. Distorted cast aluminum or plastic covers are difficult to straighten and should be replaced.