



FEL-PRO INSTALLATION TIPS

OIL PAN GASKET

It is recommended that RTV Silicone sealer be used sparingly at the front corners where the timing cover meets the block and at the rear where the rear main bearing cap meets the block.

On model years 2000 and later, a new rear main seal is used on these engines. This results in a gap on both sides at the rear main bearing cap and engine block interface. This gap must be filled with RTV Silicone or other suitable sealer before this gasket is installed.



FEL-PRO INSTALLATION TIPS

OIL PAN GASKET

It is recommended that RTV Silicone sealer be used sparingly at the front corners where the timing cover meets the block and at the rear where the rear main bearing cap meets the block.

On model years 2000 and later, a new rear main seal is used on these engines. This results in a gap on both sides at the rear main bearing cap and engine block interface. This gap must be filled with RTV Silicone or other suitable sealer before this gasket is installed.



FEL-PRO INSTALLATION TIPS

OIL PAN GASKET

It is recommended that RTV Silicone sealer be used sparingly at the front corners where the timing cover meets the block and at the rear where the rear main bearing cap meets the block.

On model years 2000 and later, a new rear main seal is used on these engines. This results in a gap on both sides at the rear main bearing cap and engine block interface. This gap must be filled with RTV Silicone or other suitable sealer before this gasket is installed.



FEL-PRO INSTALLATION TIPS

OIL PAN GASKET

It is recommended that RTV Silicone sealer be used sparingly at the front corners where the timing cover meets the block and at the rear where the rear main bearing cap meets the block.

On model years 2000 and later, a new rear main seal is used on these engines. This results in a gap on both sides at the rear main bearing cap and engine block interface. This gap must be filled with RTV Silicone or other suitable sealer before this gasket is installed.