Vehicle Relearn Instruction*

Before beginning installation and vehicle relearn, verify application fitment with your parts provider or online at www.vdo.com/usa or www.redi-sensor.com

SAP # V0511019877GM-C

- 1. Activate parking brake. Adjust tires to vehicle placard pressure.
- 2. Insert key and turn ignition ON (engine off).
- 3. Press vehicle information button on the Driver Information Center (DIC) until LEARN TIRE POSITIONS displays on screen.
- Enable vehicle learn mode by pressing the SET/RESET button. Horn will beep twice and the DIC will display TIRE LEARNING ACTIVE. If vehicle learn mode cannot be enabled, see V0511019877GM-A
- 5. Use TPMS scan tool trigger at the valve stem in the left-front tire until the horn beeps.
- 6. Repeat step 5 for remaining tires in the following order: right-front, right-rear, left-rear. Horn will beep twice when cycle is complete.
- 7. Turn ignition to OFF position and remove key.

^{*}Procedure assumes OE (original equipment) wheels, OE tires, OE TPMS sensors (direct TPMS) or REDI-Sensor multi-application TPMS sensors (direct TPMS), and may vary if otherwise equipped.

