

# Mud Flap Installation Instructions

## DZ 3802

### (1994 - Current) Dodge Ram Dually Mud Flaps

*Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.*

#### PARTS LIST:

	QTY
Mud Flaps .....	2
Hardware Bag .....	1

**INSTRUCTIONS:** Please take time to read all instructions carefully before beginning installation.

**WARNING:** It is the sole responsibility of the vehicle owner to check for tire clearance.


#### TOOLS REQUIRED:

Two 7/16" Wrenches                      A Screwdriver

---

#### STEP 1

On the rear wheel well, there are four plastic rivets. Use a phillips head screwdriver to remove the two rivets on the inside of the vehicle and discard.


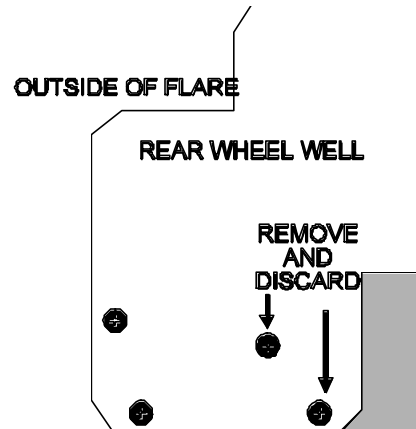


---

#### STEP 2

Position the two existing holes in the mud flap over the two exposed holes in the wheel well of the vehicle. Insert a 1/4" x 1 1/4" hex head bolt (JJ), and 1/4" washer (WJ) through the existing holes in the flap and wheel well. Secure in position with 1/4" washer and nut (N).

**NOTE:** The holes in the flap are slightly oversized to allow the flap to be leveled after installation.

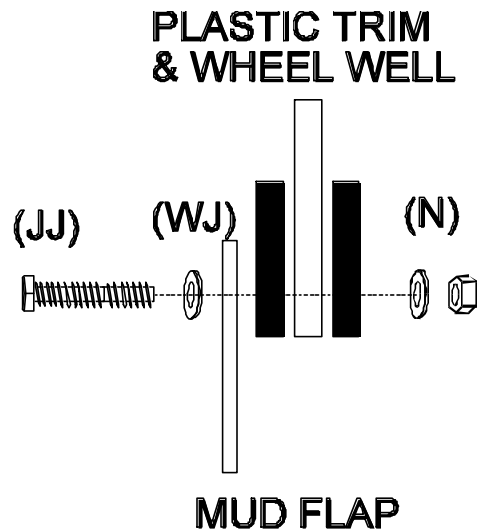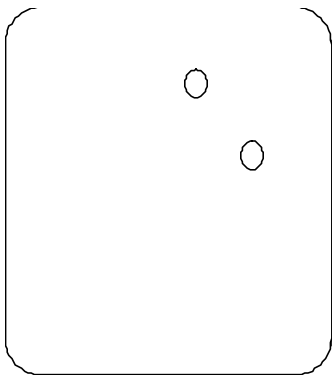

---

*\*\*If you should incur any problems with the installation of this product, please feel free to call us at 1-800-779-8222. So that we may better serve you when you call, please have the W/O#, SEQUENCE#, and the DATE from the labels on the outside of the box.*