

56515

BUICK ENCLAVE	GMC SIERRA
BUICK RAINIER	GMC YUKON
CADILLAC ESCALADE	HUMMER H2 & H3
CHEVY AVALANCHE	INFINITI QX56
CHEVY SILVERADO	ISUZU ASCENDER
CHEVY SUBURBAN	NISSAN PATHFINDER
CHEVY TAHOE	NISSAN TITAN
CHEVY TRAILBLAZER	OLDSMOBILE BRAVADA
GMC ACADIA	SAAB 9-7X
GMC ENVOY	SATURN OUTLOOK

WIRING LOCATION GUIDE

GUÍA DE UBICACIÓN DEL CABLEADO
IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.


À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

1/18/2011

English

1. Locate the tow vehicle's trailer harness connector. This connector is located under the vehicle, behind the bumper, on the driver's side of the vehicle.
2. Remove protective cap from connector taking care not to damage the locking tabs. Return the protective cap to the vehicles owner for future use.
3. Insert the harness connector into the vehicle's connector (A,B). Make sure that the T-Connector is fully inserted with locking tabs in place.

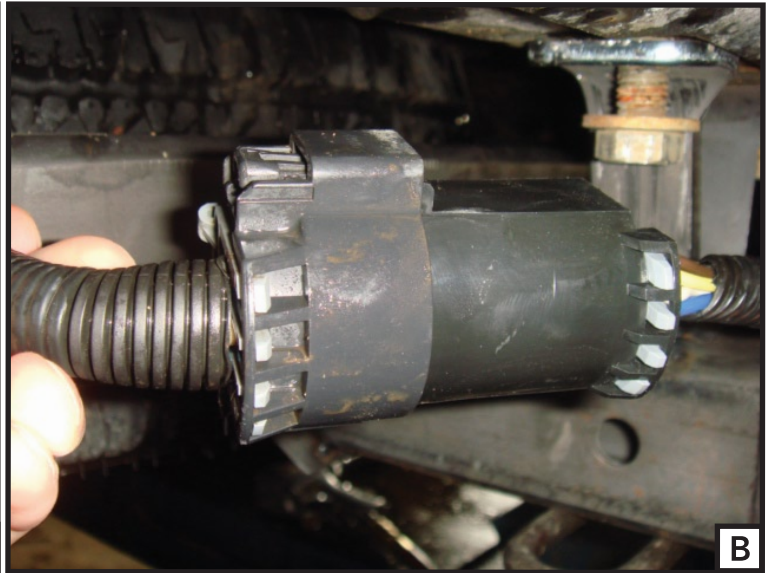

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

